POCKET ASSEMBLY

A. ATTACHING THE REAR BRACKET:

Align the two (2) screw emboss locations to the matching locations on pocket. When aligned, slide the bracket together. Screw the two (2) supplied screws to screw emboss locations

B. ATTACHING THE POCKET:

Align the pocket to the snaps of kit panel. Snap the pocket into place on the back of kit panel.

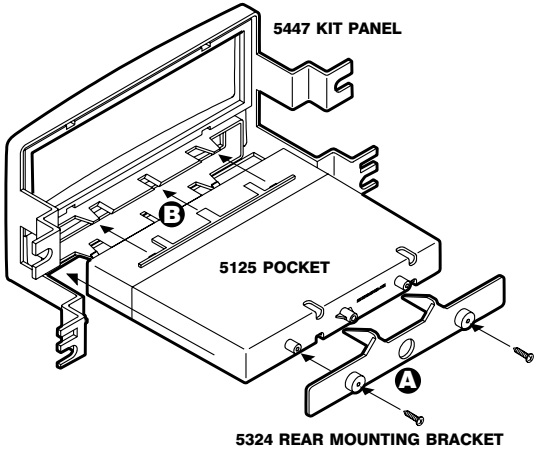

STEREO INSTALLATION

2003-Up Toyota Sequoia

RADIO REMOVAL AND IN-DASH INSTALLATION

NOTE: The Factory radio provision is for a Double ISO/DIN style radio.

1. Extract (1) Phillips screw from each air vent in radio dash bezel.
2. Using panel removal tool, pry off radio bezel, pull away, unplug and remove.
3. Extract (4) 10 mm bolts securing radio, pull away, unplug, and remove.

2003-Up Toyota Tundra

RADIO REMOVAL AND IN-DASH INSTALLATION

1. Extract (2) Phillips screws in vents.
2. Remove (3) AC control knobs. Remove (3) Phillips screws from behind.
3. Using panel removal tool, pop out dash that covers AC controls and radio.
4. Extract (4) 10 mm bolts from radio brackets, disconnect and remove.

MOUNTING THE RADIO

CAUTION:
REAR SUPPORTING THE RADIO ADDS TO THE INSTALLATIONS STRUCTURAL INTEGRITY.

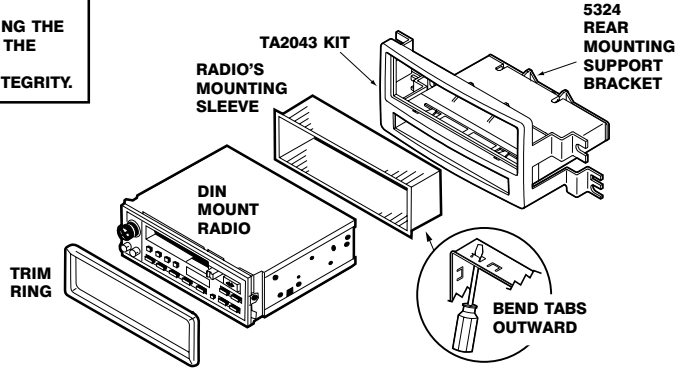

SCOSCHE®

TA2043

IN-DASH INSTALLATION KIT FOR 2003-UP TOYOTA SEQUOIA/TUNDRA VEHICLES

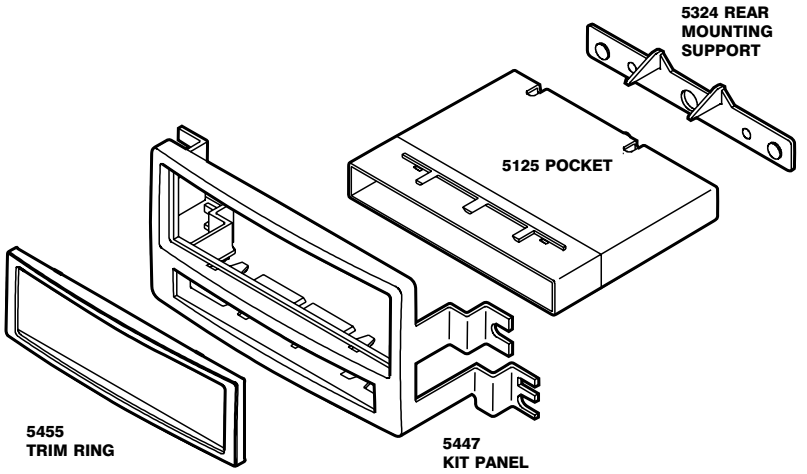

INTRODUCTION / PRELIMINARY

Thank you for purchasing the Scosche TA2043 Kit. This kit was manufactured with the highest of quality standards.

CAUTION:
DISCONNECT YOUR VEHICLE'S NEGATIVE BATTERY TERMINAL BEFORE THE INSTALLATION TO HELP PREVENT ELECTRICAL DAMAGE. WE RECOMMEND THE USE OF A VOLT/OHM METER OVER A TEST LIGHT TO CHECK WIRING. A TEST LIGHT OR GROUNDED WIRE PROBE CAN CAUSE DAMAGE TO THE VEHICLE'S COMPUTER AND/OR DIAGNOSTIC SYSTEMS. AVOID ALL FACTORY AIR BAG WIRING - AIR BAGS CAN ACCIDENTALLY DEPLOY CAUSING SERIOUS INJURY OR DEATH.

NOTES:

- See your vehicle's instructions for any special tools your installation might require.
- Read all instructions accompanying your car stereo/cassette player for proper wiring and mounting instructions.

FACTORY WIRING CODES

For Factory Wiring Codes go to: **www.scosche-cars.com**

LIABILITY DISCLAIMER

This instruction booklet is based on carefully documented data and research of automobile dash disassembly, wire harness/codes and information pertaining to installation of this kit (TA2043) in 2003-UP Toyota Sequoia/Tundra Vehicles. Scosche Industries, Inc. can not be held responsible for discrepancies/inconsistencies that may occur due to the automobile manufacturing changes or options, or damage that may occur in the automobile during the installation of components while using this booklet.

If you have any further questions, call our toll free technical help line at: **1-800-621-3695x3**

© 2007 SCOSCHE INDUSTRIES, INC.

SI 03/07 - TA2043 (3000465)